


Tri-Porter™ IVT600 Triple Play Tester (Voice/Video/Data) Quick Start Guide

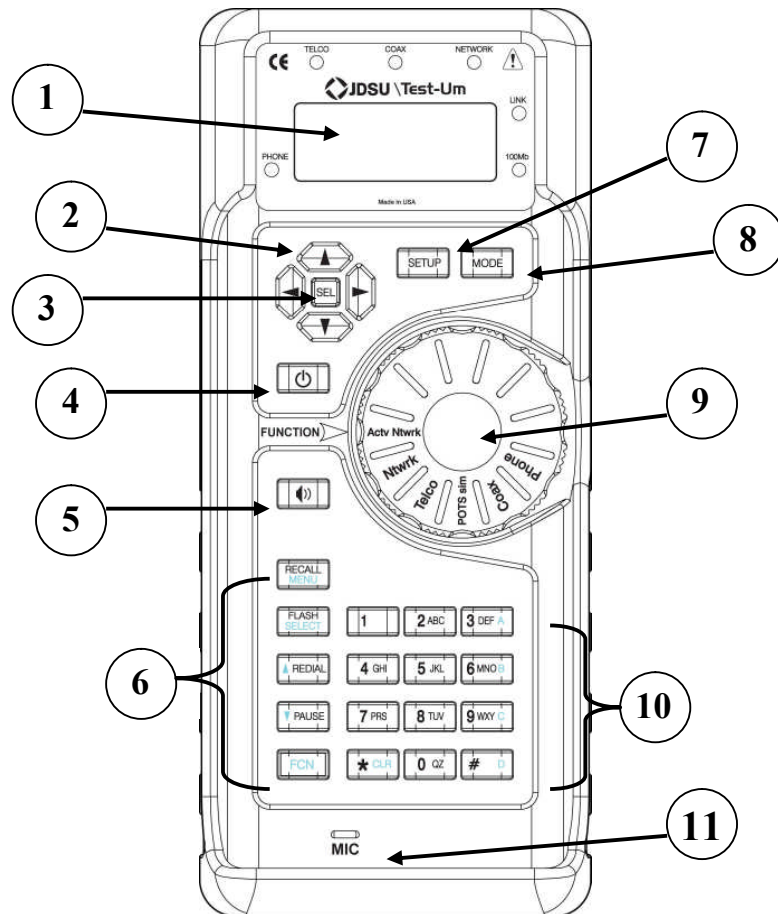

ABC's of Test and Measurement

- A. Press **Power Button** to turn on the unit
- B. Turn the **Function Wheel** to select the correct test mode
- C. The **LED** lights denote the proper test port
- D. Use the **Mode** button to select the specific test Plug in the cable to test
- E. Press **SEL** to start the test

Test Functions

- Actv Ntwrk:** Jack ID and Active Network testing
Ntwrk: Testing for 8 conductor cables. CAT cables, RJ45
Telco: Phone wire testing, 6 conductors, RJ11/RJ14
POTS Sim: Energizes phone lines with 2 lines
Coax: F connector for coax testing, RF Energy, special toning
Phone: Advanced feature Test Set, DSL friendly, DTMF Decode

Included Accessories

- | | |
|----------------------------------|-----------------------------------|
| 1-Carrying Case | 1-TT35: Probe Duckbill |
| 1-LB40B: Head Set | 2-TP20: RJ12 Telephone patch cord |
| 2-TP74: Sacrificial Cable | 1-TP311: Coax Map Set #1-20 |
| 1-LB35: Cable Assy, Bed of Nails | 1-TP312: RJ45 Map Set #1-20 |
| 2-TP56: RJ45 Patch Cord | 1-TP314: RJ11 Map Set #1-20 |
| 1-1ft RG6 Patch Cord | 1-Slide on, F Adapter |
| 1-10' Grd Pin to Alligator Clip | 1-Male F to Male F Coupler |

Button Function

1. LCD display with backlight
2. Arrow keys for navigating through screens
3. SEL key activates mode functions for testing
4. Power Button toggles backlight, hold to turn off
5. Speaker Volume Control. Used in phone mode
6. Function keys used in phone mode
7. Setup works in any non-phone function to customize the tests
8. Mode cycles through test options
9. Function wheel selects the test mode
10. Alphanumeric Keys
11. Microphone

